

## TLC BOUNCE Cotton Candy Machine Instructions

- 1 Make sure motor is positioned in the center of the cart and switches are facing the opening.
- 2 Plug the machine into a standard electrical outlet.
- 3 Fill center of machine with approximately one cup or less of sugar.
- 4 Moisten Whirl Grip (mesh screen) with a damp sponge. This process allows the floss to adhere to the side of the floss bowl.
- 5 Turn the motor switch ON and turn the heat switch to MEDIUM.
- 6 Dampen cone slightly and twirl cone approximately 1 inch away from Whirl Grip. Do not stop twirling until machine is turned off.
- WARNING:** Do not put hand close to the center of the machine while operating.
- 7 Work floss away from the center of machine. You may make several servings, approximately up to 10 at a time, but will have to stop to allow the machine to cool to prevent the sugar from burning.
- 8 Once you have made the servings, you MUST TURN OFF THE HEAT SWITCH FIRST. This step is crucial to prevent sugar from clogging and burning.**
- 9 Allow machine to cool for a few minutes.
- 10 When you are ready to make more servings, repeat Steps 5-9.
- 11 When finished, TURN OFF HEAT SWITCH FIRST.
- 12 When cool, turn OFF the motor switch.

### **Cleaning**

**Please do not attempt to clean this machine as problems may occur.**  
**cotton candy supplies**

### **SERVINGS: 500 1000 2000**

Floss Mix 1/2 gallon 10 20 40

Floss Cones 100 pack 5 10 20

Plastic Bags 100 pack 5 10 20

### **Includes:**

Machine

Floss bowl

Clear bubble guard

Whirl grip with 4 clips

### **Options:**

Floss sugar carton 1/2 gallon

Cotton candy cones

Cotton candy bags